

Glamox FL45

Dismantle



Needed tools

SW10; SW16; T20; T30; Crosshead; SW2,5; SW2

