

Glamox FX60

Dismantle



Needed tools

SW16; SW5; T30; Crosshead

