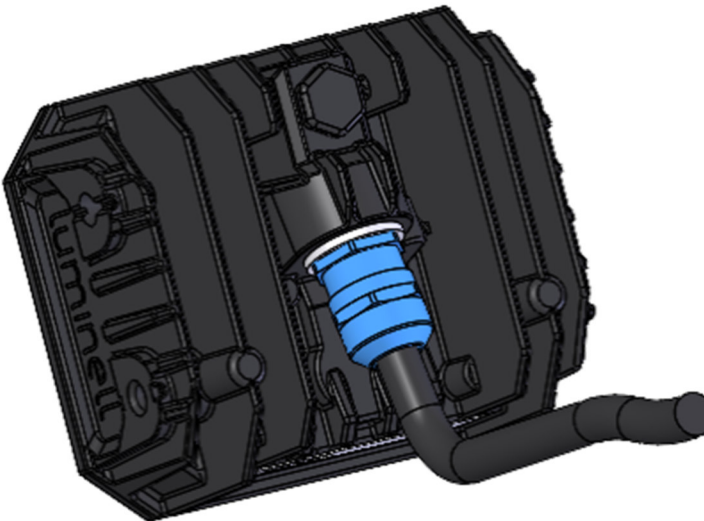
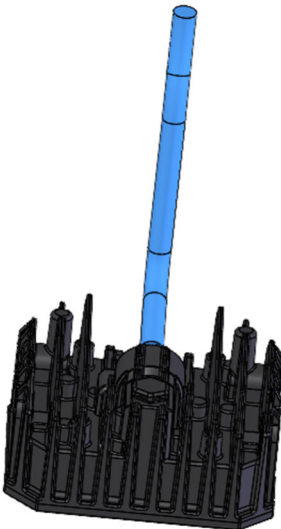


Dismantling of RLX B G2 luminaire fixture

#	Description	Illustration
1	Unscrew bolts (13 mm spanner) and remove bracket.	
2	Loosen and unscrew breather vent (18 mm spanner).	

Dismantling of RLX B G2 luminaire fixture

#	Description	Illustration
3	Loosen and unscrew cable gland (24 mm spanner).	
4	Cut cable flush with housing.	

Dismantling of RLX B G2 luminaire fixture


Description

Cut silicone cementing around front glass and remove front glass (cutting knife).



- 5** Caution!
Cutting hazard. Wear proper protective gear and hold fixture in place, e.g. using a vice.

- 6** Unscrew M3 bolts (TX10 drive screwdriver) and remove plastic lenses.


Illustration

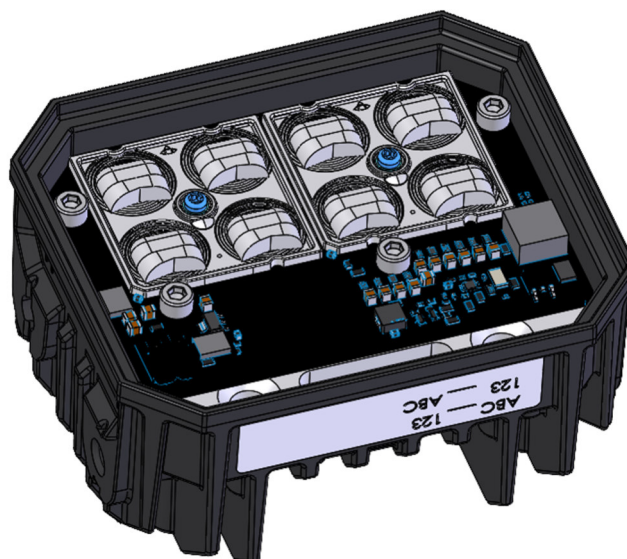

Dismantling of RLX B G2 luminaire fixture
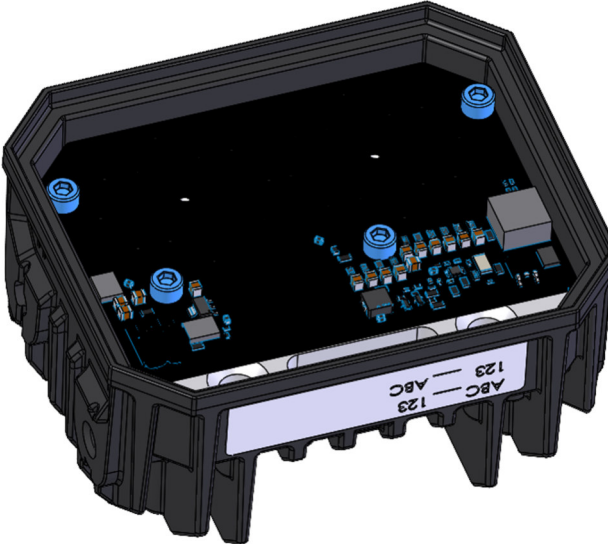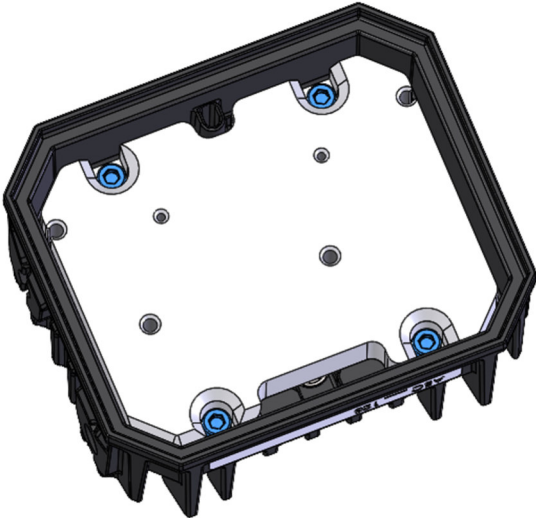
#	Description	Illustration
7	Unscrew M5 bolts (4 mm Allen key). Cut wires connected to circuit board. Remove circuit board.	
8	Unscrew M5 bolts and remove aluminium plate (4 mm Allen key).	

Dismantling of RLX B G2 luminaire fixture
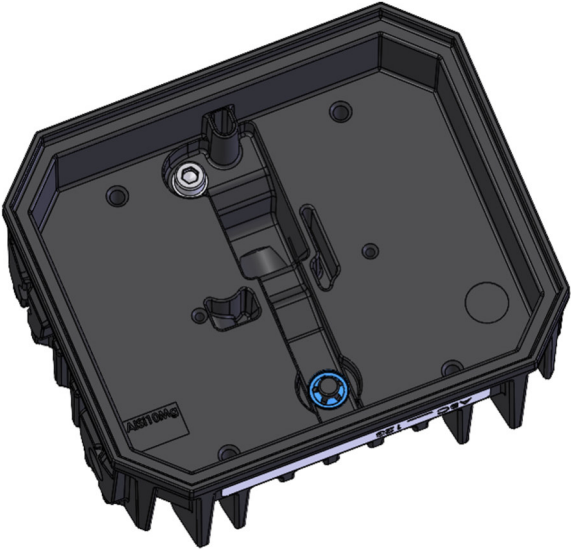
#	Description	Illustration
9	Remove lock-washer with pliers.	
10	Unscrew M5 bolts (4 mm Allen key). Cut all loose wires flush with black potting in the center.	